

T8008SB (T-FHSS compatible receiver)

User Manual

Thank you purchasing a Cooltech T8008SB T-FHSS 2.4GHz compatible receiver. The T8008SB has an S.BUS system output port and a conventional system channel outputs. It can also be used with conventional system servos, etc. in addition to S.BUS sysem compatible servos and gyros, etc.




1.1 Compatibility:

CH1~CH8 output for conventional system

Applicable systems: T-FHSS Air-2.4GHz system transmitter



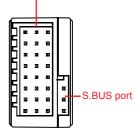

1.2 Specifications:

Operating Voltage Range:	3.5V~ 8.4V
Dimension:	47.5X25.3X15mm
Weight:	11g

2. How to link to the transmitter/如何跟遥控器连接



- 1. Bring the transmitter and receiver close to each other within half meter. 把接收机和遥控器放在距离半米以内。
- 2. Turn on the transmitter. Place the transmitter into the receiver linking mode. 打开遥控器,把遥控器设定到对码模式。
- 3. Turn on the receiver. 打开接收机
- 4. The receive will wait for the linking process to being for 3seconds, Following that it will return to the normal operation mode. 接收机将会等待连接过程3秒钟,之后将会转换到正常操作模式。
- 5. When the LED of the receiver changes from blinking red to solid green, linking is completed. 当接收机从红灯闪烁变为长绿时,连接就完成了。

3. LED Status/指示灯状态

Green	Red	Status
off	solid	No signal reception
solid	off	Receiving signals
off	blinking	Receiver is linking to transmitter

Thank you for purchasing COOLTEC products, for more informations about us, please visit our website: WWW.COOltechnology.cn